



Cover: W82/51 stone, SC armpart



aleXx

22850

Dream sofa for the individualist.

Be honest, given the choice we would all like to be sitting pretty! **aleXx** 22850 comes with different seat comforts and three leg/seat heights. You influence the appearance, because you can simply order your favourite armpart. The extensive range of elements offers greater planning possibilities partially due to the different seat depths.


W.SCHILLIG

ARMCHAIRS



ME55
armchair ST A/Z and
ST E/V available



MH55E
armchair tall back
cushion ST A/Z and
ST E/V available

85/93/77/43

Boxspring = BX1
(surcharge)

**Memory Comfort =
MC1** (surcharge)

extra depth = XL1
(no surcharge)

85/93/83/43

Boxspring = BX1
(surcharge)

**Memory Comfort =
MC1** (surcharge)

extra depth = XL1
(no surcharge)

CORNER ELEMENTS



E
pointed corner

94/94/77/43

Boxspring = BX3
(surcharge)

**Memory Comfort =
MC3** (surcharge)

extra depth = XL3
(no surcharge)



ET
corner element

108/108/77/43

Boxspring = BX4
(surcharge)

**Memory Comfort =
MC4** (surcharge)

extra depth = XL4
(no surcharge)



EH
pointed corner tall
back cushion

94/94/83/43

Boxspring = BX3
(surcharge)

**Memory Comfort =
MC3** (surcharge)

extra depth = XL3
(no surcharge)



ETH
corner element tall
back cushion


108/108/83/43

Boxspring = BX4
(surcharge)

**Memory Comfort =
MC4** (surcharge)


extra depth = XL4
(no surcharge)

SOFAS



N60
sofa

152/93/77/43
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
extra depth = XL5
(no surcharge)




N70
sofa

172/93/77/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)




N80
large sofa

192/93/77/43
Boxspring = BX9
(surcharge)
Memory Comfort = MC9 (surcharge)
extra depth = XL9
(no surcharge)



N90
large sofa

212/93/77/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)



N100
large sofa

232/93/77/43
Boxspring = BX11
(surcharge)
Memory Comfort = MC11 (surcharge)
extra depth = XL11
(no surcharge)



NH60
sofa tall back cushion

152/93/83/43
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
extra depth = XL5
(no surcharge)




NH70
sofa tall back cushion

172/93/83/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)




NH80
large sofa tall back cushion

192/93/83/43
Boxspring = BX9
(surcharge)
Memory Comfort = MC9 (surcharge)
extra depth = XL9
(no surcharge)



NH90
large sofa tall back cushion

212/93/83/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)



NH100
large sofa tall back cushion


232/93/83/43
Boxspring = BX11
(surcharge)
Memory Comfort = MC11 (surcharge)
extra depth = XL11
(no surcharge)

ELEMENTS WITHOUT ARMPARTS



N60K
sofa

120/93/77/43
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
extra depth = XL5
(no surcharge)




N70K
sofa

140/93/77/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)




N80K
large sofa

160/93/77/43
Boxspring = BX9
(surcharge)
Memory Comfort = MC9 (surcharge)
extra depth = XL9
(no surcharge)



N90K
large sofa

180/93/77/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)



N100K
large sofa without
armpart

200/93/77/43
Boxspring = BX11
(surcharge)
Memory Comfort = MC11 (surcharge)
extra depth = XL11
(no surcharge)




NH60K
sofa tall back cushion

120/93/83/43
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
extra depth = XL5
(no surcharge)



NH70K
sofa tall back cushion

140/93/83/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)




NH80K
large sofa tall back
cushion

160/93/83/43
Boxspring = BX9
(surcharge)
Memory Comfort = MC9 (surcharge)
extra depth = XL9
(no surcharge)



NH90K
large sofa tall back
cushion

180/93/83/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)



NH10K
large sofa without
armpart tall back
cushion

200/93/83/43
Boxspring = BX11
(surcharge)
Memory Comfort = MC11 (surcharge)
extra depth = XL11
(no surcharge)

ELEMENTS WITH ARMPART RIGHT



M60R
element with armpart

76/93/77/43
Boxspring = BX1
(surcharge)
Memory Comfort = MC1 (surcharge)
extra depth = XL1
(no surcharge)



M70R
element with armpart

86/93/77/43
Boxspring = BX2
(surcharge)
Memory Comfort = MC2 (surcharge)
extra depth = XL2
(no surcharge)



M80R
element with armpart

96/93/77/43
Boxspring = BX3
(surcharge)
Memory Comfort = MC3 (surcharge)
extra depth = XL3
(no surcharge)



M90R
element with armpart

106/93/77/43
Boxspring = BX4
(surcharge)
Memory Comfort = MC4 (surcharge)
extra depth = XL4
(no surcharge)



MH60R
element with armpart
tall back cushion

76/93/83/43
Boxspring = BX1
(surcharge)
Memory Comfort = MC1 (surcharge)
extra depth = XL1
(no surcharge)



MH70R
element with armpart
tall back cushion

86/93/83/43
Boxspring = BX2
(surcharge)
Memory Comfort = MC2 (surcharge)
extra depth = XL2
(no surcharge)



MH80R
element with armpart
tall back cushion

96/93/83/43
Boxspring = BX3
(surcharge)
Memory Comfort = MC3 (surcharge)
extra depth = XL3
(no surcharge)



MH90R
element with armpart
tall back cushion


106/93/83/43
Boxspring = BX4
(surcharge)
Memory Comfort = MC4 (surcharge)
extra depth = XL4
(no surcharge)






N60R
sofa with armpart

136/93/77/43
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
extra depth = XL5
(no surcharge)




N70R
sofa with armpart

156/93/77/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)



N80R
large sofa with armpart

176/93/77/43
Boxspring = BX9
(surcharge)
Memory Comfort = MC9 (surcharge)
extra depth = XL9
(no surcharge)



N90R
large sofa with armpart

196/93/77/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)




N100R
large sofa with armpart

216/93/77/43
Boxspring = BX11
(surcharge)
Memory Comfort = MC11 (surcharge)
extra depth = XL11
(no surcharge)




NH60R
sofa with armpart tall back cushion

136/93/83/43
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
extra depth = XL5
(no surcharge)




NH70R
sofa with armpart tall back cushion

156/93/83/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)




NH80R
large sofa with arm-part tall back cushion

176/93/83/43
Boxspring = BX9
(surcharge)
Memory Comfort = MC9 (surcharge)
extra depth = XL9
(no surcharge)



NH90R
large sofa with arm-part tall back cushion

196/93/83/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)



NH10R
large sofa with arm-part tall back cushion

216/93/83/43
Boxspring = BX11
(surcharge)
Memory Comfort = MC11 (surcharge)
extra depth = XL11
(no surcharge)

ELEMENTS WITH ARMPART LEFT



M60L
element with armpart

76/93/77/43
Boxspring = BX1
(surcharge)
Memory Comfort = MC1 (surcharge)
extra depth = XL1
(no surcharge)



M70L
element with armpart

86/93/77/43
Boxspring = BX2
(surcharge)
Memory Comfort = MC2 (surcharge)
extra depth = XL2
(no surcharge)



M80L
element with armpart

96/93/77/43
Boxspring = BX3
(surcharge)
Memory Comfort = MC3 (surcharge)
extra depth = XL3
(no surcharge)



M90L
element with armpart

106/93/77/43
Boxspring = BX4
(surcharge)
Memory Comfort = MC4 (surcharge)
extra depth = XL4
(no surcharge)



MH60L
element with armpart
tall back cushion

76/93/83/43
Boxspring = BX1
(surcharge)
Memory Comfort = MC1 (surcharge)
extra depth = XL1
(no surcharge)



MH70L
element with armpart
tall back cushion

86/93/83/43
Boxspring = BX2
(surcharge)
Memory Comfort = MC2 (surcharge)
extra depth = XL2
(no surcharge)



MH80L
element with armpart
tall back cushion

96/93/83/43
Boxspring = BX3
(surcharge)
Memory Comfort = MC3 (surcharge)
extra depth = XL3
(no surcharge)



MH90L
element with armpart
tall back cushion

106/93/83/43
Boxspring = BX4
(surcharge)
Memory Comfort = MC4 (surcharge)
extra depth = XL4
(no surcharge)



N60L
sofa with armpart

136/93/77/43
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
extra depth = XL5
(no surcharge)



N70L
sofa with armpart

156/93/77/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)




N80L
large sofa with
armpart

176/93/77/43
Boxspring = BX9
(surcharge)
Memory Comfort = MC9 (surcharge)
extra depth = XL9
(no surcharge)



N90L
large sofa with
armpart

196/93/77/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)




N100L
large sofa with
armpart

216/93/77/43
Boxspring = BX11
(surcharge)
Memory Comfort = MC11 (surcharge)
extra depth = XL11
(no surcharge)




NH60L
sofa with armpart tall
back cushion

136/93/83/43
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
extra depth = XL5
(no surcharge)




NH70L
sofa with armpart tall
back cushion

156/93/83/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)




NH80L
large sofa with arm-
part tall back cushion

176/93/83/43
Boxspring = BX9
(surcharge)
Memory Comfort = MC9 (surcharge)
extra depth = XL9
(no surcharge)



NH90L
large sofa with arm-
part tall back cushion

196/93/83/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)



NH10L
large sofa with arm-
part tall back cushion

216/93/83/43
Boxspring = BX11
(surcharge)
Memory Comfort = MC11 (surcharge)
extra depth = XL11
(no surcharge)

END ELEMENTS RIGHT




K70R
one arm chaise

88/153/77/43

Boxspring = BX7
(surcharge)

Memory Comfort = MC7 (surcharge)

extra depth = XL7
(no surcharge)



KL90R
deep one arm chaise

108/176/77/43

Boxspring = BX10
(surcharge)

Memory Comfort = MC10 (surcharge)

extra depth = XL10
(no surcharge)




KH70R
one arm chaise tall
back cushion

88/153/83/43

Boxspring = BX7
(surcharge)

Memory Comfort = MC7 (surcharge)

extra depth = XL7
(no surcharge)




KC90R
deep one arm chaise
tall back cushion

108/176/83/43

Boxspring = BX10
(surcharge)

Memory Comfort = MC10 (surcharge)

extra depth = XL10
(no surcharge)




EG70R
corner sofa with
ottoman

97/218/77/43

Boxspring = BX12
(surcharge)

Memory Comfort = MC12 (surcharge)

extra depth = XL12
(no surcharge)



EC70R
corner sofa with
ottoman tall back
cushion

97/218/83/43

Boxspring = BX12
(surcharge)


Memory Comfort = MC12 (surcharge)

extra depth = XL12
(no surcharge)

END ELEMENTS LEFT




K70L
one arm chaise




KL90L
deep one arm chaise




KH70L
one arm chaise tall
back cushion



KC90L
deep one arm chaise
tall back cushion



EG70L
corner sofa with
ottoman



EC70L
corner sofa with
ottoman tall back
cushion

88/153/77/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)

108/176/77/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)

88/153/83/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)

108/176/83/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)


97/218/77/43
Boxspring = BX12
(surcharge)
Memory Comfort = MC12 (surcharge)
extra depth = XL12
(no surcharge)

97/218/83/43
Boxspring = BX12
(surcharge)
Memory Comfort = MC12 (surcharge)
extra depth = XL12
(no surcharge)

FREE-STANDING ELEMENTS RIGHT




C70R
free-standing sofa
with ottoman



C80R
free-standing sofa
with ottoman



CH70R
free-standing sofa
with ottoman tall
back cushion



CH80R
free-standing sofa
with ottoman tall
back cushion


214/97/77/43
Boxspring = BX12
(surcharge)
Memory Comfort = MC12 (surcharge)
extra depth = XL12
(no surcharge)

234/97/77/43
Boxspring = BX13
(surcharge)
Memory Comfort = MC13 (surcharge)
extra depth = XL13
(no surcharge)


214/97/83/43
Boxspring = BX12
(surcharge)
Memory Comfort = MC12 (surcharge)
extra depth = XL12
(no surcharge)

234/97/83/43
Boxspring = BX13
(surcharge)
Memory Comfort = MC13 (surcharge)
extra depth = XL13
(no surcharge)

FREE-STANDING ELEMENTS LEFT




C70L
free-standing sofa
with ottoman



C80L
free-standing sofa
with ottoman



CH70L
free-standing sofa
with ottoman tall
back cushion



CH80L
free-standing sofa
with ottoman tall
back cushion

214/97/77/43
Boxspring = BX12
(surcharge)
Memory Comfort = MC12 (surcharge)
extra depth = XL12
(no surcharge)

234/97/77/43
Boxspring = BX13
(surcharge)
Memory Comfort = MC13 (surcharge)
extra depth = XL13
(no surcharge)

214/97/83/43
Boxspring = BX12
(surcharge)
Memory Comfort = MC12 (surcharge)
extra depth = XL12
(no surcharge)

234/97/83/43
Boxspring = BX13
(surcharge)
Memory Comfort = MC13 (surcharge)
extra depth = XL13
(no surcharge)



OTTOMANS



G60
ottoman



G120
large ottoman



G140
extra large ottoman



G160
extra large ottoman

60/60/43

Boxspring = BX1
(surcharge)
Memory Comfort = MC1 (surcharge)
castors = RO
(surcharge)

120/60/43

Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
castors = RO
(surcharge)

140/60/43

Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
castors = RO
(surcharge)

160/60/43

Boxspring = BX8
(surcharge)
Memory Comfort = MC8 (surcharge)
castors = RO
(surcharge)

ACCESSORIES



U
armchair pillow

46/52/0



UAR
pillow with non-slip matting (leather version)

60/60/0



U92
plug-in headrest

59/11/22/0



U55K
plug-in headrest for 55 cm seat

45/11/22/0



U60K
plug-in headrest for 60 cm seat

50/11/22/0



U70K
plug-in headrest for 70 cm seat

60/11/22/0



U80K
plug-in headrest for 80 cm seat

70/11/22/0



U90K
plug-in headrest for 90 cm seat

80/11/22/0



U100K
plug-in headrest for 100 cm seat

90/11/22/0

Z
base leg



W.SCHILLIG

ARMPART VERSIONS



SAR raf
SAL laf
armp. A
no surcharge
NO OVERMEASURE

/1/0



SZR re
SZL li
armpart Z
no surcharge
NO OVERMEASURE



SBR raf
SBL laf
armp. B
plus surcharge
overm. + 2 cm per ap.

2/1/0



SYR re
SYL li
armpart Y
plus surcharge
overm. + 2 cm per ap.



SCR raf
SCL laf
armpart C
no surcharge
overm. + 10 cm per ap.

10/1/0



SXR re
SXL li
armpart X
no surcharge
overm. + 10 cm per ap.



SDR raf
SDL laf
armpart D
plus surcharge
overm. + 22 cm per ap.

22/1/0

armpart adjust. =
SV1 (surcharge)



SWR re
SWL li
armpart W
plus surcharge
overm. + 22 cm per ap.




armpart adjust. =
SV1 (surcharge)



SER raf
SEL laf
armpart E
no surcharge
dim. - 8 cms



SVR re
SVL li
armpart V
no surcharge
dim. - 8 cms

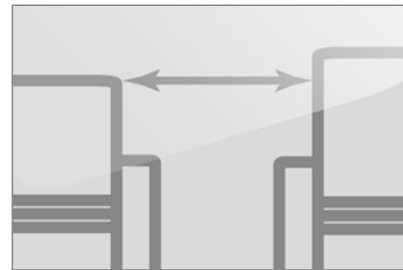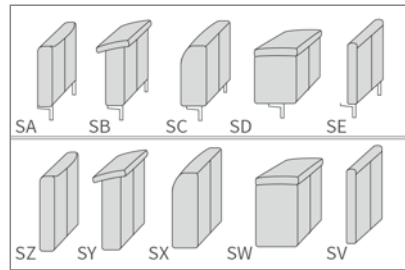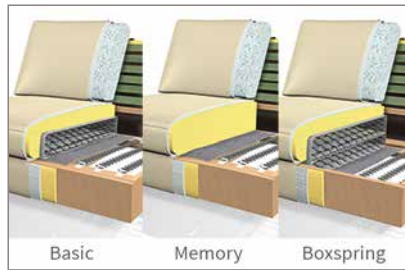

3 seat comforts/2 back heights

Basic, memory foam (surcharge) or Boxspring with additional pocket spring core under-springing (surcharge). Choose from 2 back-rest heights.

10 armparts - 2 flexible

SD and SW can be equipped with the armpart adjustment with notch function (item no. = SV).

Back heights - tall

The model is available with standard as well as tall backs (items with the appendix "H" and "C").

Flexible plug-in headrests

The headrests with joint can be inserted into the opening between the back body and the back cushions individually.

Two seat depths

The model is available in two seat depths. The seat depth is achieved via the back cushion thickness. Art. no. Excess depth = XL... (without surcharge).

ORDER INFORMATION

Armpart shapes:

The armchairs are available with the armparts SA/SZ and SE/SV, only.

Flexible armparts:

A max. load-bearing capacity up to 25 kg is guaranteed for functional armrests. They are not a seat.

Free-standing elements:

Please note that the orientation "left/right" is the position of the armpart.

Standard and extra tall elements:

Elements with standard back height are shown light grey coloured, extra tall elements dark grey coloured. They cannot be combined with each other.

Seam appearance:

Decorative, felled or double seams may appear different in fabric and leather versions. For

manufacturing reasons, seams may be left out of the fabric version or replaced with simple seams.

Contrasting thread:

This model is available in leather and some fabric colours with contrasting colour thread at no extra charge. You will find the specified colours in our fabric/leather trolley. Please state the no., otherwise tone-in-tone will be delivered.

All of the dimensions given are approximate dimensions in cm. We reserve the right to make changes. Dimensions are given as follows: width/depth/height/seat height and refer to the leg height of 13 cm and armpart SA (width 16 cm). Elements with ottoman have a total depth of ca. 97 cm depending on the ottoman at the end's depth.

Seat depth: approx. 56 cm

Extra deep seat depth: ca. 59 cm

Seat height: approx. 43/45/47 cm

Armpart versions:

off-the-floor, with leg

SA - cubic, width approx. 16 cm

SB - narrow, with pillow, width approx. 18 cm - overmeasure + approx. 2 cm, surcharge

SC - cubic, angled inside, width approx. 26 cm - overmeasure + approx. 10 cm

SD - wide, with pillow, width approx. 38 cm - overmeasure + approx. 22 cm, surcharge, also available with armpart adjustment

SE - very narrow, rounded on top, width approx.

8 cm - deviation - approx. ca. 8 cm

on-the-floor, with plastic glide

SZ - cubic, width approx. 16 cm

SY - narrow, with pillow, width approx. 18 cm - overmeasure + approx. 2 cm, surcharge

SX - cubic, angled inside, width approx. 26 cm - overmeasure + ca. 10 cm

SW - wide, with pillow, width approx. 38 cm - overmeasure + approx. 2 cm, surcharge

SV - very narrow, rounded on top, width approx.

8 cm - deviation - approx. ca. 8 cm

Please note that the armparts SE and SV are smaller than the base armparts SA and SZ. Thus a deviation of approx. 8 cm is given. When ordering one arm chaises in conjunction with the narrow armparts SE and SV, the ottoman at the front of the one arm chaise is not upholstered wide.

Crease formation:

Fabric and leather stretch during use, „creases“ may form in the cover. This has no influence on use, function and service life and does not constitute a material defect.

Note on upholstery construction:

Ticking cushions have been used in the back. These may show under the cover. This is a typical feature of the product.

UAR cushion with anti-slip mat:






















The UAR pillow in leather has an anti-slip mat. In everyday use, there is no discolouration/material detachment on the leather.

Digital fabric/leather and colour samples:

The visual appearance of the covers and colour samples may vary, samples in accordance - colour and structure deviations possible.

W.SCHILLIG

LEGS

<p>ca. 13 cm/ seat height ca. 43 cm</p>							
	<p>metal leg, gloss</p>	<p>metal leg different metal colours</p>	<p>metal runner, gloss</p>	<p>metal castor/ottoman, surcharge</p>	<p>metal leg, diff. metal col.</p>	<p>wooden leg oiled oak P58</p>	<p>Plastic glide</p>
	<p>F 70</p>	<p>F 7P</p>	<p>F 7S</p>	<p>F 6R</p>	<p>F S1</p>	<p>F Y2</p>	<p>F 00</p>
<p>ca. 15 cm/ seat height ca. 45 cm</p>							
	<p>F 6P</p>	<p>F 7Q</p>	<p>F 7T</p>	<p>F 7R</p>	<p>F V8</p>	<p>F Y3</p>	<p>F 85</p>
<p>ca. 17 cm/ seat height ca. 47 cm</p>							
	<p>F 7L</p>	<p>F V1</p>	<p>F V2</p>	<p>F 4G</p>	<p>F 9Z</p>	<p>F 4F</p>	

Leg and seat heights:

Due to different leg heights, the model is available in different seat and total heights. The leg version has to be indicated. With on-the-floor armparts, the seat height is achieved via an armpart extended downwards. The legs F 7P/F7Q/FV1, F70/F6P/F7L and FS1/FV8/F4G are wider than the narrow armparts and extend to the frame. **Castors**

for ottomans are available in two heights only, for techn. reasons.

Castors for ottomans: Every ottoman (except connected ottomans) can be equipped with castors for surcharge. The item no. is „RO“. Two of the castors can be fixed. They are available in a variety of heights.

Runners:

We assemble visibly matching legs instead of the runner under the corner elements. At the W-elements optically matching legs are mounted generally instead of the runner.

Plastic gliders: The plastic glides are available for on-the-floor armpart designs, only.

Metal colours: Some of the metal legs are available in diffe-





















rent metal colours. Please indicate the colour when ordering.

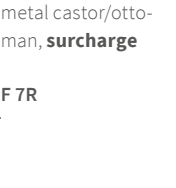Legs and floor protection: With slim furniture legs with a small gliding surface, there is increased pressure on the floor. We recommend fitting glides or an underlay to protect against scratches and pressure marks on sensitive floors.

ORDER CHECKLIST

- Structure and cover
- Seating comfort Basic, Memory (surcharge) or Boxspring (surcharge)
- Armpart version
- Flexible armparts (surcharge)
- Seat height 43 cm/45 cm, 47 cm (not available with every leg)
- Extra deep seat (no surcharge)
- Leg design/-height - seat height
- Metal colour for legs
- Ottomans & Accessories
- Castors for ottomans (surcharge)
- Positioning diagram
- Contrasting thread

LEGS

ca. 13 cm/ seat height ca. 43 cm							
	metal leg, gloss	metal leg different metal colours	metal runner, gloss	metal castor/ottoman, surcharge	metal leg, diff. metal col.	wooden leg oiled oak P58	Plastic glide
ca. 15 cm/ seat height ca. 45 cm							
	metal leg, gloss	metal leg different metal colours	metal runner, gloss	metal castor/ottoman, surcharge	metal leg, diff. metal col.	wooden leg oiled oak P58	Plastic glide
ca. 17 cm/ seat height ca. 47 cm							
	metal leg, gloss	metal leg different metal colours	metal runner, gloss		metal leg, diff. metal col.	wooden leg oiled oak P58	Plastic glide
	F 70	F 7P	F 7S	F 6R	F S1	F Y2	F 00
	F 6P	F 7Q	F 7T	F 7R	F V8	F Y3	F 85
	F 7L	F V1	F V2	F 4G	F 9Z	F 4F	

AVAILABLE METAL COLOURS



high-gloss chrome

silver

bronze

black

M20

M21

M56

M99

ORDER CHECKLIST


- Structure and cover
- Seating comfort Basic, Memory (surcharge) or Boxspring (surcharge)
- Armpart version
- Flexible armparts (surcharge)
- Seat height 43 cm/45 cm, 47 cm (not available with every leg)
- Extra deep seat (no surcharge)
- Leg design/-height - seat height
- Metal colour for legs
- Ottomans & Accessories
- Castors for ottomans (surcharge)
- Positioning diagram
- Contrasting thread

LIVING EXAMPLES



Cover: Z69/50 cognac, SC armpart

sofa combination
N 70 - N 80

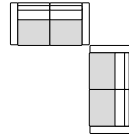


265x285



Cover: Z73/42 white, SB armpart

corner combination
EC 70L laf - NH 70K - KH 70R raf




325x218



Cover: Z77/95 graphite, SD armpart

sofa combination
N 80 - C 70 L laf

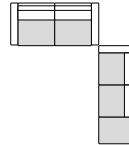


289x307



Cover: W82/27 blue, SC armpart

corner combination
N 80L laf - KL 90R raf



284x176

LIVING EXAMPLES



Cover: Z78/15 blush, SE armpart



Cover: W82/51 stone, SC armpart

corner combination
N 80L laf - KL 90R raf




284x176



Cover: W82/99 black, SC armpart

corner combination
N 80L laf - KL 90R raf




284x176



Cover: Z69/51 tobacco, SD armpart

sofa combination
N 80 - C 70 L laf

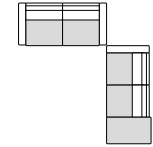

289x307

LIVING EXAMPLES



Cover: Z69/22 light grey, SE armpart



Cover: Z69/50 cognac, SE armpart



Cover: Z78/21 steel, SE armpart

UPHOLSTERED FURNITURE FRAME STRUCTURE



The design of the cross section shown here does not correspond to the model on this page of the catalogue.

- 1. Frame** – Beech wood structure
- 2. Seat suspension** with permanently elastic wave springs
- 3. Seat upholstery structure** – of **ergo**-PUR foam with coil spring core and diolen cover. Or seating comfort Memory with memory foam (surcharge). Or seating comfort Boxspring with additionally Bonell coil spring core next to the standard coil spring core (surcharge)
- 4. Back suspension** due to upholstery strap
- 5. Back upholstery structure** with high quality mix of polyester fibres and foam rods, filled in boxes

www.schillig.com



Upholstered furniture from passion.

For almost 75 years, this passion has led to the creation of high-quality and special pieces of furniture and designer furniture - sofas that combine elegant and contemporary design with first-class comfort. We stand for craftsmanship, trend-setting ideas, appealing design and know-how from Germany. The result is upholstered furniture with guaranteed first-class comfort and attention to detail. When selecting the materials used, we pay attention to sustainability and the conservation of resources.

- Traditional craftsmanship down to the last detail
- High-quality, environmentally friendly materials
- Careful & precise workmanship
- Cooperation with renowned furniture designers
- Production according to DIN & RAL quality guidelines of the Deutsche Gütegemeinschaft Möbel e.V.
- Regularly tested product quality „Made in Germany“
- Development at the Upper Franconian location in Ebersdorf near Coburg
- Carefully selected fabric and leather cover collections in many colours for a wide range of requirements.



quality
Made in Germany

W.SCHILLIG GmbH & Co. KG
Am Weinberg 20 - 22
96237 Ebersdorf bei Coburg
GERMANY
Telephone: +49 9562 37-0
Telefax: +49 9562 37-500
E-Mail: info@schillig.de


W.SCHILLIG